
Vertiv™ PowerUPS 200

Line Interactive Series, 120V

Quick Installation Guide

Register your purchase

IMPORTANT: *Before installing, connecting to supply, or operating a Vertiv™ PowerUPS 200 Line Interactive Series UPS, review the Safety and Regulatory Statements sheet. For detailed installation, operating, maintenance, and troubleshooting information refer to the Vertiv™ PowerUPS 200 Series User Guide by visiting www.Vertiv.com.*

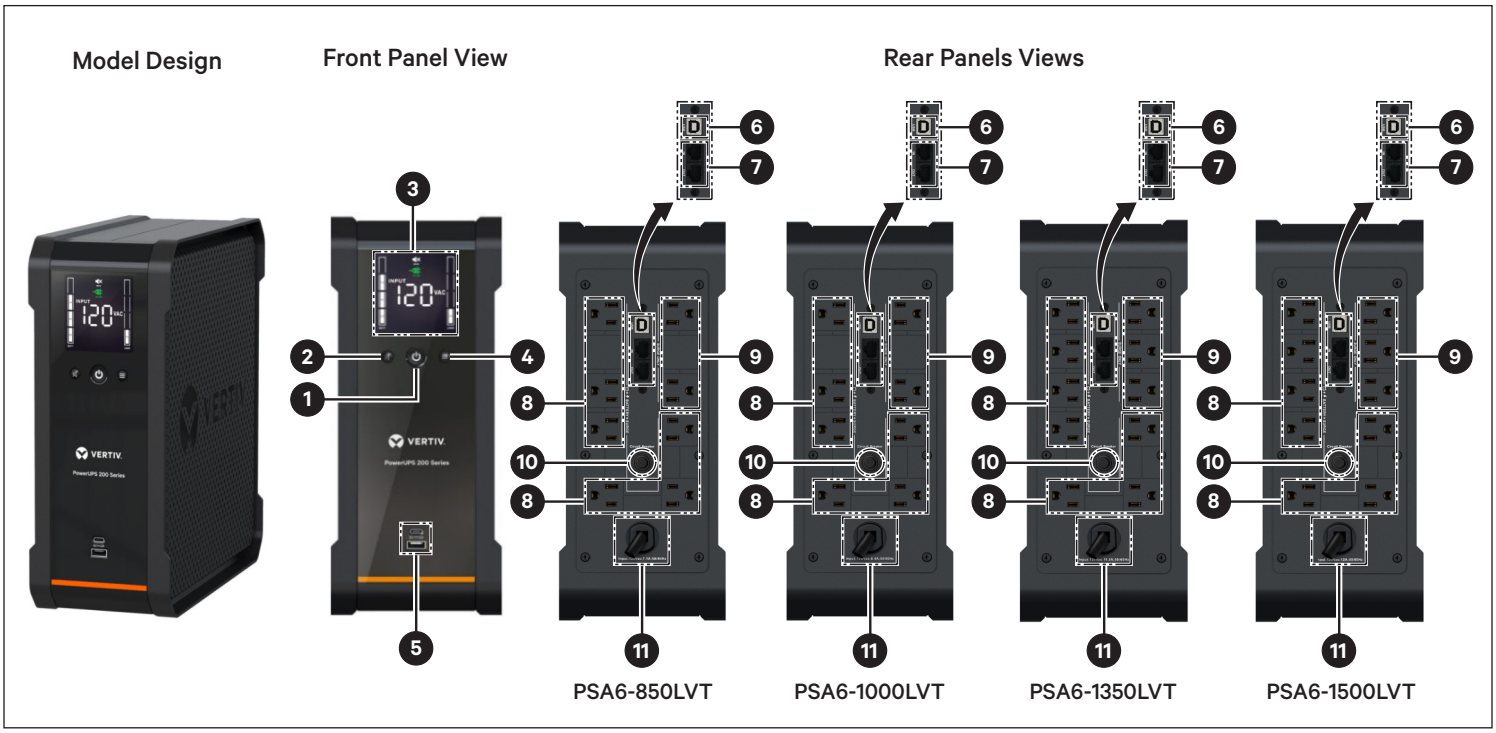

AVAILABLE MODELS	
Model Number	**Nominal Power Rating**
PSA6-850LVT	850 VA / 530 W
PSA6-1000LVT	1000 VA / 625 W
PSA6-1350LVT	1350 VA / 850 W
PSA6-1500LVT	1440 VA / 935 W

Item	Description
1	Power button
2	Mute button
3	LCD display
4	LCD navigation
5	USB charging ports 5 V/2 A max. (Type A and C)
6	USB communication port (Type B)
7	RJ45 connectors for network surge protection
8	Battery-backed and surge-protected receptacles
9	Surge-protected only receptacles
10	Input circuit breaker
11	Input power cord

Inspecting the UPS


Inspect the contents of the box. If anything is missing or damaged contact us.

The following items are included:

- Vertiv™ PowerUPS 200 Series UPS
- Quick installation guide
- Safety and regulatory statements
- 1 x USB type A to B cable

PROPRIETARY AND CONFIDENTIAL ©2025 VERTIV GROUP CORP.

Unboxing and Setup

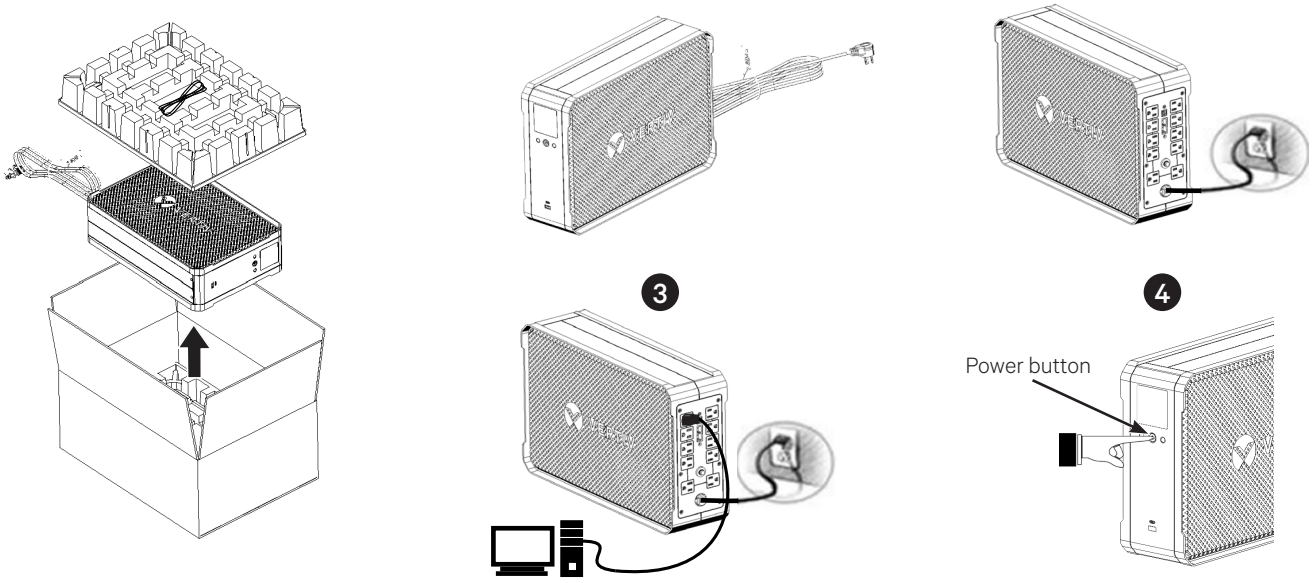

ALARM DETAILS		
Indicators	**LED Indicator (Power Button)**	**Alarm Frequency**
Normal operation	Solid white	No audible noise
Battery mode	Blinking green (every 2 seconds)	Every 10 seconds
UPS overload warning (Line mode)	Solid yellow	Every 0.5 seconds
UPS overload warning (Battery mode)	Solid yellow	Every 0.5 seconds
UPS over temperature warning (Line mode)	Blinking yellow (every 1 second)	Every 0.5 seconds
UPS over temperature warning (Battery mode)	Blinking yellow (every 1 second)	Every 1 second
Battery low warning	Blinking yellow (every 1 second)	Every 1 second
Battery replacement	Blinking yellow (every 2 seconds)	Every 2 seconds
UPS fault	Solid red	Constant solid beep

TROUBLESHOOTING DETAILS		
Symptom	**Possible Cause**	**Corrective Action**
UPS does not turn on	The power button is not pressed.	Press and hold the power button for 1 second and then release it to power on the UPS.
	UPS input cord is not plugged in or outside AC circuit breaker is tripped.	Ensure the UPS is plugged into a properly wired and grounded outlet. Avoid using extension cords, adapters or other connectors.
No LED/LCD display	Battery is low.	Charge battery for up to 8 hours.
	Battery has a defect.	Call 1-800-543-2378 for service/warranty replacement.
Alarm beeps continuously when AC supply is normal	Overload of the UPS.	Verify that the load matches the UPS capacity specified.
UPS does not provide expected runtime	Overload of the UPS.	Remove any non-critical load.
	Battery defect due to high temperature, or improper operation.	Call 1-800-543-2378 for service/warranty replacement.
Battery mode/green LED is blinking in normal mode	Power cord is loose.	Reconnect the power cord properly.
Power button red	UPS has detected an internal fault.	Call 1-800-543-2378 for service/warranty replacement.

PROPRIETARY AND CONFIDENTIAL ©2025 VERTIV GROUP CORP.

THIS PAGE INTENTIONALLY
LEFT BLANK

PROPRIETARY AND CONFIDENTIAL ©2025 VERTIV GROUP CORP.



To contact Vertiv Technical Support: visit www.Vertiv.com

© 2025 Vertiv Group Corp. All rights reserved. Vertiv™ and the Vertiv logo are trademarks or registered trademarks of Vertiv Group Corp. All other names and logos referred to are trade names, trademarks or registered trademarks of their respective owners. While every precaution has been taken to ensure accuracy and completeness here, Vertiv Group Corp. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions.

